GEBRAUCHSANWEISUNG · INSTRUCTIONS FOR USE · MODE D'EMPLOI · GEBRUIKS.
ISTRUZIONI PER L'USO · MANUAL DE USO · ΟΔΗΓΙΕΣ ΚΡΗΣΗΣ · BRUKSANVISNING ·
ИНСТРУКЦИИ ПО ЭКСПЛУАТАЦИИ · BRUKSANVISNING · NÁVOD K POUŽITÍ · ИНСТ.
NÁVOD NA POUZITIE · INSTRUKCJA UØYTKOWANIA · HASZNÁLATI UTASÍTÁS · INSTR
INSTRUCTIONS FOR USE · MODE D'EMPLOI · GEBRUIKSAANWIJZING · INSTRUCCIONES PA.
MANUAL DE USO · ΟΔΗΓΙΕΣ ΚΡΗΣΗΣ · BRUKSANVISNING · SISÄLTÖ · BRUGSANVISNING · И.
BRUKSANVISNING · NÁVOD K POUŽITÍ · ИНСТРУКЦИИ ЗА ИЗПОЛЗВАНЕ · NÁVOD NA POU.
HASZNÁLATI UTASÍTÁS · INSTRUCTIUNI DE UTILIZARE · GEBRAUCHSANWEISUNG · INSTRUC.
MODE D'EMPLOI · GEBRUIKSAANWIJZING · INSTRUCCIONES PARA EL USO · ISTRUZIONI PER L'USO
ΟΔΗΓΙΕΣ ΚΡΗΣΗΣ · BRUKSANVISNING · SISÄLTÖ · BRUGSANVISNING · ИНСТРУКЦИИ ПО ЭКСПЛУ.
BRUKSANVISNING · NÁVOD K POUŽITÍ · ИНСТРУКЦИИ ЗА ИЗПОЛЗВАНЕ · NÁVOD NA POUŽITIE · I.
HASZNÁLATI UTASÍTÁS · INSTRUCTIUNI DE UTILIZARE · GEBRAUCHSANWEISUNG · INSTRUCTIONS FO
GEBRUIKSAANWIJZING · INSTRUCCIONES PARA EL USO · ISTRUZIONI PER L'USO · MANUAL DE USO · O
BRUKSANVISNING · SISÄLTÖ · BRUGSANVISNING · ИНСТРУКЦИИ ПО ЭКСПЛУАТАЦИИ · BRUKSANVISI
NÁVOD K POUŽITÍ · ИНСТРУКЦИИ ЗА ИЗПОЛЗВАНЕ · NÁVOD NA POUŽITIE · INSTRUKCJA UØYTKO
HASZNÁLATI UTASÍTÁS · INSTRUCTIU
MODE D'EMPLOI · GEBRUIKSAANWIJZ
ИНСТРУКЦИИ ЗА ИЗПОЛЗВАНЕ · NA
INSTRUCTIUNI DE UTILIZARE · GEBRA
INSTRUCCIONES PARA EL USO · ISTRU
BRUGSANVISNING · ИНСТРУКЦИИ ПО
NÁVOD NA POUŽITIE · INSTRUKCJA
GEBRAUCHSANWEISUNG · INSTRUCTIO
ISTRUZIONI PER L'USO · MANUAL DE
ИНСТРУКЦИИ ПО ЭКСПЛУАТАЦИИ
NÁVOD NA POUZITIE · INSTRUKCJA
INSTRUCTIONS FOR USE · MODE D'EM
MANUAL DE USO · ΟΔΗΓΙΕΣ ΚΡΗΣΗΣ
BRUKSANVISNING · NÁVOD K POUŽIT
HASZNÁLATI UTASÍTÁS · INSTRUCTIU
MODE D'EMPLOI · GEBRUIKSAANWIJZ
ΟΔΗΓΙΕΣ ΚΡΗΣΗΣ · BRUKSANVISNING
BRUKSANVISNING · NÁVOD K POUŽIT
ИНСТРУКЦИИ ЗА ИЗПОЛЗВАНЕ · NA
HASZNÁLATI UTASÍTÁS · INSTRUCTIU
MODE D'EMPLOI · GEBRUIKSAANWIJZ
BRUKSANVISNING · SISÄLTÖ · BRUGSA
ИНСТРУКЦИИ ЗА ИЗПОЛЗВАНЕ · NÁ
INSTRUCTIUNI DE UTILIZARE · GEBRA
INSTRUCCIONES PARA EL USO · ISTRU
BRUGSANVISNING · ИНСТРУКЦИИ ПО
NÁVOD NA POUŽITIE · INSTRUKCJA U
GEBRAUCHSANWEISUNG · INSTRUCTION
ISTRUZIONI PER L'USO · MANUAL DE USO
ИНСТРУКЦИИ ПО ЭКСПЛУАТАЦИИ · BRUKSANVISNING · SISÄLTÖ · BRUGSA
NÁVOD K POUŽITÍ · ИНСТРУКЦИИ ЗА ИЗПОЛЗВАНЕ · NÁVOD NA POUŽITIE · INSTRUKCJA UØYTKOWANIA · HASZNÁLATI UTASÍTÁS · INSTRUCTIUNI DE UTILIZARE · GEBRAUCHSANWEISUNG · INSTRUCTIONS FOR USE · MODE D'EMPLOI · GEBRUIKSAANWIJZING · INSTRUCCIONES PARA EL USO · ISTRUZIONI PER L'USO · MANUAL DE USO · ΟΔΗΓΙΕΣ ΚΡΗΣΗΣ · BRUKSANVISNING · SISÄLTÖ · BRUGSANVISNING · ИНСТРУКЦИИ ПО ЭКСПЛУАТАЦИИ · BRUKSANVISNING · NÁVOD K POUŽITÍ · ИНСТРУКЦИИ ЗА ИЗПОЛЗВАНЕ · NÁVOD NA POUŽITIE · INSTRUKCJA UØYTKOWANIA · HASZNÁLATI UTASÍTÁS · INSTRUCTIUNI DE UTILIZARE · GEBRAUCHSANWEISUNG · INSTRUCTIONS FOR USE · MODE D'EMPLOI · GEBRUIKSAANWIJZING · INSTRUCCIONES PARA EL USO · ISTRUZIONI PER L'USO · MANUAL DE USO · ΟΔΗΓΙΕΣ ΚΡΗΣΗΣ · BRUKSANVISNING · SISÄLTÖ · BRUGSANVISNING · ИНСТРУКЦИИ ПО ЭКСПЛУАТАЦИИ · BRUKSANVISNING · NÁVOD K POUŽITÍ · ИНСТРУКЦИИ ЗА ИЗПОЛЗВАНЕ · NÁVOD NA POUŽITIE · INSTRUKCJA UØYTKOWANIA · HASZNÁLATI UTASÍTÁS · INSTRUCTIUNI DE UTILIZARE · GEBRAUCHSANWEISUNG · INSTRUCTIONS FOR USE · MODE D'EMPLOI · GEBRUIKSAANWIJZING · INSTRUCCIONES PARA EL USO · ISTRUZIONI PER L'USO · MANUAL DE USO · ΟΔΗΓΙΕΣ ΚΡΗΣΗΣ · BRUKSANVISNING · SISÄLTÖ · BRUGSANVISNING · ИНСТРУКЦИИ ПО ЭКСПЛУАТАЦИИ · BRUKSANVISNING · NÁVOD K POUŽITÍ · ИНСТРУКЦИИ ЗА ИЗПОЛЗВАНЕ · NÁVOD NA POUŽITIE · INSTRUKCJA UØYTKOWANIA · HASZNÁLATI UTASÍTÁS · INSTRUCTIUNI DE UTILIZARE · GEBRAUCHSANWEISUNG · INSTRUCTIONS FOR USE · MODE D'EMPLOI · GEBRUIKSAANWIJZING · INSTRUCCIONES PARA EL USO · ISTRUZIONI PER L'USO · MANUAL DE USO · ΟΔΗΓΙΕΣ ΚΡΗΣΗΣ · BRUKSANVISNING · SISÄLTÖ · BRUGSANVISNING · ИНСТРУКЦИИ ПО ЭКСПЛУАТАЦИИ · BRUKSANVISNING · NÁVOD K POUŽITÍ · ИНСТРУКЦИИ ЗА ИЗПОЛЗВАНЕ · NÁVOD NA POUŽITIE · INSTRUKCJA UØYTKOWANIA · HASZNÁLATI UTASÍTÁS · INSTRUCTIUNI DE UTILIZARE · GEBRAUCHSANWEISUNG · INSTRUCTIONS FOR USE · MODE D'EMPLOI · GEBRUIKSAANWIJZING · INSTRUCCIONES PARA EL USO · ISTRUZIONI PER L'USO · MANUAL DE USO · ΟΔΗΓΙΕΣ ΚΡΗΣΗΣ · BRUKSANVISNING · SISÄLTÖ · BRUGSANVISNING · ИНСТРУКЦИИ ПО ЭКСПЛУАТАЦИИ · BRUKSANVISNING · NÁVOD K POUŽITÍ · ИНСТРУКЦИИ ЗА ИЗПОЛЗВАНЕ · NÁVOD NA POUŽITIE · INSTRUKCJA UØYTKOWANIA · HASZNÁLATI UTASÍTÁS · INSTRUCTIUNI DE UTILIZARE · GEBRAUCHSANWEISUNG · INSTRUCTIONS FOR USE · MODE D'EMPLOI · GEBRUIKSAANWIJZING · INSTRUCCIONES PARA EL USO · ISTRUZIONI PER L'USO · MANUAL DE USO · ΟΔΗΓΙΕΣ ΚΡΗΣΗΣ · BRUKSANVISNING · SISÄLTÖ · BRUGSANVISNING · ИНСТРУКЦИИ ПО ЭКСПЛУАТАЦИИ · BRUKSANVISNING · NÁVOD K POUŽITÍ · ИНСТРУКЦИИ ЗА ИЗПОЛЗВАНЕ · NÁVOD NA POUŽITIE · INSTRUKCJA UØYTKOWANIA · HASZNÁLATI UTASÍTÁS · INSTRUCTIUNI DE UTILIZARE · GEBRAUCHSANWEISUNG · INSTRUCTIONS FOR USE · MODE D'EMPLOI · GEBRUIKSAANWIJZING · INSTRUCCIONES PARA EL USO

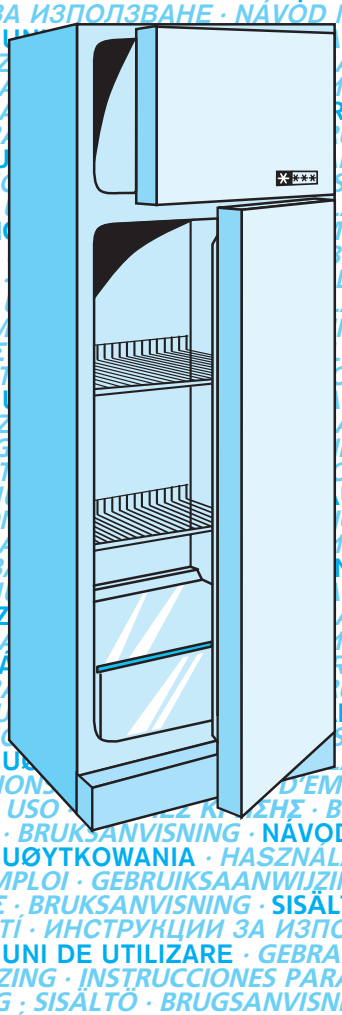

ENGLISH	Instructions for use	Page	**3**
FRANÇAIS	Notice d'emploi	Page	**10**
ITALIANO	Istruzioni per l'uso	Pagina	**18**

CONTENTS

GB

BEFORE USING THE APPLIANCE Page 4

PROTECTING THE ENVIRONMENT Page 4

PRECAUTIONS AND GENERAL SUGGESTIONS Page 4

HOW TO USE THE REFRIGERATOR COMPARTMENT Page 5

HOW TO USE THE FREEZER COMPARTMENT Page 6

HOW TO DEFROST AND CLEAN THE FREEZER COMPARTMENT Page 7

HOW TO CLEAN THE REFRIGERATOR COMPARTMENT Page 7

CARE AND MAINTENANCE Page 8

TROUBLESHOOTING GUIDE Page 8

AFTER SALES SERVICE Page 9

INSTALLATION Page 9

BEFORE USING THE APPLIANCE

- Your new fridge-freezer is designed exclusively for use in the home.
  The ****** **freezer compartment** may be used to freeze fresh and cooked foods, make ice cubes and store both deep-frozen and frozen products. The freezer is defrosted manually.
  The **refrigerator compartment defrosts automatically** and is used to store fresh food and drinks.

  For maximum satisfaction from your appliance carefully read these user instructions which contain a description of your appliance and useful food storage tips.

Keep this booklet in a safe place for future consultation.

1. After unpacking, make sure the appliance is undamaged and that the door closes correctly. Any damage must be communicated to your retailer within 24 hours of delivery.
2. **Wait at least 2 hours before connecting the appliance to the power supply.**
3. Make sure appliance installation and electrical connections are made by a qualified technician in compliance with the manufacturer's instructions and current local safety regulations.

PROTECTING THE ENVIRONMENT

1. **Packing** ♺
   The packing box may be fully recycled as confirmed by the recycling symbol.
   Follow local disposal regulations.
   Keep potentially hazardous packaging (plastic bags, polystyrene etc.) out of the reach of children.
2. **Appliance**
   The appliance is built from reusable materials.
   If you decide to scrap the refrigerator, it must be disposed of in compliance with local waste disposal laws. Before scrapping, cut off the power cable so that the appliance cannot be connected to the mains. Dispose of the appliance at an authorised collection centre for refrigerant.

Information
This appliance is free of CFC's (refrigerant circuit contains R134a) or free of HFC's (refrigerant circuit contains R600a – Isobutane). For more details, please refer to the rating plate on the appliance.

PRECAUTIONS AND GENERAL RECOMMENDATIONS

- Only use the **refrigerator compartment** to store fresh food and the freezer compartment to store frozen food, freeze fresh food and make ice cubes.
- Do not cover or close the air vents.
- Do not store liquids in glass containers in the freezer compartment since they may explode.
- Do not eat ice cubes or ice lollies immediately after taking them out of the freezer since they may cause "cold" burns.
- Do not allow children to play or hide in the refrigerator to prevent the risk of trapping and suffocation.
- **Before cleaning or servicing the appliance, always unplug it or switch off the mains power supply.**
- The mains power cable may be replaced only by a trained service technician.

Declaration of conformity

- This appliance is designed to store food products and complies with EC Directive 89/109.

For appliances with Isobutane (R600a)
The refrigerant Isobutane is a natural gas of high environmental compatibility but which is inflammable. Therefore, it is essential to ensure that the ducts of the refrigerant circuit do not get damaged.

HOW TO USE THE REFRIGERATOR COMPARTMENT

This refrigerator is equipped with a ✳*** star freezer compartment.
The refrigerator compartment defrosts automatically.
The refrigerator can operate in an ambient temperature ranging from +10°C to +38°C but functions best at temperatures between +16°C and +32°C.

Switching on the refrigerator
Insert the plug in the mains outlet.
The thermostat sets the temperature in both the refrigerator and freezer compartments.

Setting the temperature:
1. For correct operation and optimum food storage in both compartments. **Refer to enclosed product sheet for thermostat setting instructions.**
2. If you wish to change the temperature setting in the compartments, turn the thermostat adjustment knob as required:
   - For **WARMER TEMPERATURES** turn the thermostat knob down to positions **1 or 2**.
   - For **COLDER TEMPERATURES** turn the thermostat knob up to positions **5 to 7**.

When the thermostat is set to ● both the appliance and internal light switch off.

Note:
The temperature inside the two compartments is in part determined by the position of the appliance, the room temperature and frequency with which the doors are opened.
Use the thermostat to adjust the temperature in relation to these factors.

How to store food in the refrigerator compartment
1. Fill the refrigerator as illustrated in the adjacent figure:

A. Cooked food
B. Meat and fish
C. Fruit and vegetables
D. Bottles
E. Eggs
F. Butter, cheese etc.

Notes:
- Air circulates freely between the shelves and back wall of the refrigerator interior.
- Do not store food against the back wall of the refrigerator compartment.
- Do not store warm food in the refrigerator compartment.
- Store liquids in closed containers.
- The storage of greens with a high water content may cause condensation to form inside the bottom drawer. This is quite normal however, and in no way impairs refrigerator performance.

HOW TO USE THE FREEZER COMPARTMENT

The ✳* star freezer compartment may be used to store frozen products for the time indicated on the packaging and to freeze fresh food by placing it on the shelf in the top of the freezer. Frozen products should instead be stored in the bottom of the freezer compartment to prevent contact with food still to be frozen.**
The rating plate shows the quantity of fresh food that can be frozen in 24 hours.

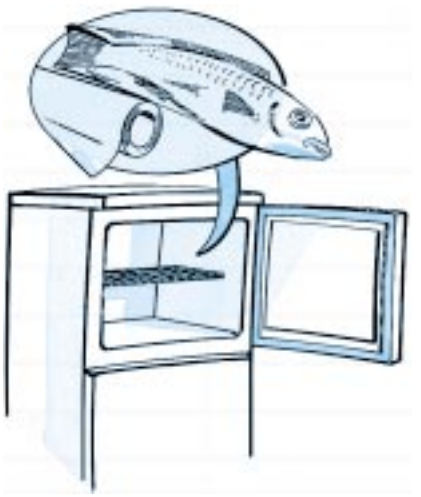

Important
Wrap and seal fresh food in:
- Aluminium foil, cling film, air and water-tight plastic bags, polythene containers with lids or special freezer containers.
- The freezer compartment is able to maintain correct storage temperatures even in the case of power failure. If this is the case, do not open the freezer door until power is restored.

Important
Refer to the adjacent table for fresh food storage times (months).

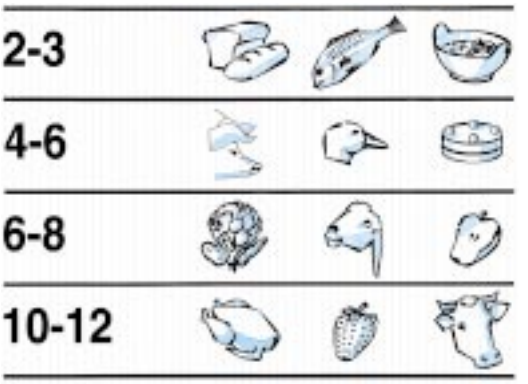

When you purchase frozen food, make sure:
- The packaging is undamaged (frozen food in damaged packaging may have deteriorated). If the package bulges or is marked by liquid stains, the product has not been correctly stored and may have partially thawed.
- When shopping, leave frozen food purchases until last and transport items in insulated bags.
- Place items in the freezer as soon as you get home.
- If food has partially thawed, do not refreeze. Consume within 24 hours.
- Avoid subjecting frozen foods to temperature variations. Observe the "Best before date" on the packaging.
- Always observe the storage information on packages.

Making ice cubes
- Fill the ice cube tray three quarters full with water and place in the bottom of the freezer compartment.
  If the ice cube tray sticks to the bottom of the compartment do not use pointed or sharp instruments to detach them.

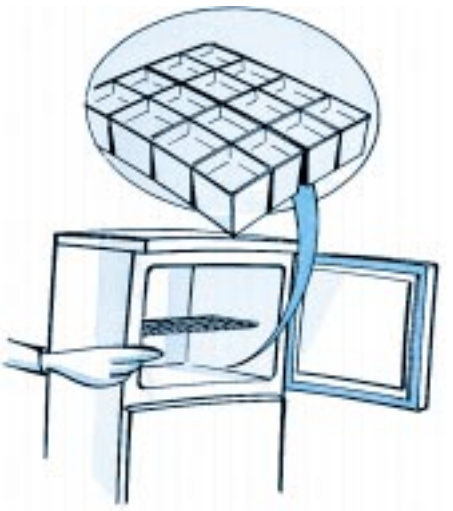

HOW TO DEFROST AND CLEAN THE FREEZER COMPARTMENT

We recommend defrosting the freezer compartment once or twice a year when ice has built up to about 3 mm on the walls and when the freezer contents are low.

1. Open the door, remove the food from the freezer, wrap in paper and pack together in an insulated bag or cool part of the house.
2. Unplug the appliance.
3. Leave the door open to allow the ice on the freezer walls to thaw.
4. Remove the defrost water from the bottom of the freezer compartment.
5. Clean with a sponge soaked in a solution of lukewarm water and neutral detergent. **Do not use abrasive products.**
6. Rinse and dry thoroughly.

- **Note: To avoid irreparable damage to the freezer compartment, do not use pointed or sharp metal instruments to scrape off ice or heat the compartment artificially.**

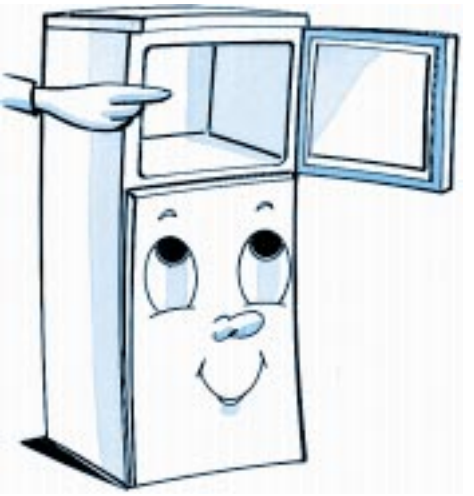

HOW TO CLEAN THE REFRIGERATOR COMPARTMENT

Regularly clean the refrigerator compartment. The refrigerator compartment defrosts automatically.
The formation of water droplets on the back wall of the refrigerator compartment indicates that the automatic defrosting cycle is underway. The defrost water is channelled to a run-off and collected in a container where it evaporates. Keep the run-off channel clean using the special tool supplied. This ensures that defrost water is drained efficiently.

Before cleaning the appliance, unplug it from the mains.

- Clean the refrigerator interior with a sponge soaked in a solution of lukewarm water and/ or neutral detergent.
- Rinse and dry thoroughly with a soft cloth. **Do not use abrasive products.**

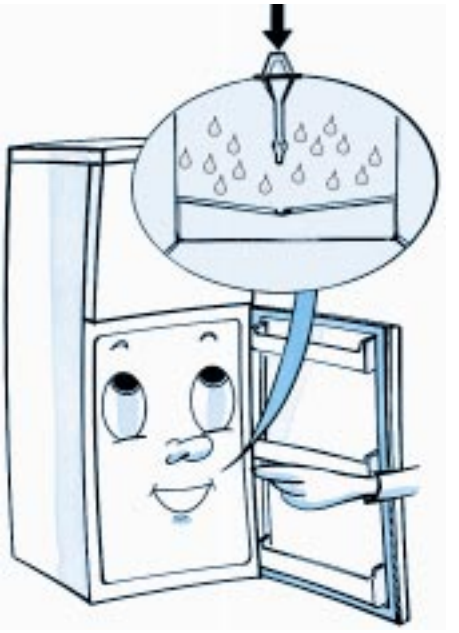

CARE AND MAINTENANCE

Built-in appliances

- Regularly clean the air vents using a vacuum cleaner or brush (see figure Ⓐ).
- Clean the exterior with a soft cloth.

Free-standing appliances

- Regularly clean the condenser at the rear of the appliance using a vacuum cleaner or brush (see figure Ⓑ).

PROLONGED DISUSE

1. Empty the refrigerator and freezer compartments.
2. Unplug from the mains.
3. Defrost the freezer compartment and clean and dry the interior of both compartments.
4. Leave the doors open to prevent the formation of unpleasant odours.

TROUBLESHOOTING GUIDE

1. The appliance does not work

- Is there a power failure?
- Is the plug properly inserted in the socket?
- Is the two-pole circuit breaker connected
- Has the fuse blown?
- Is the power cable damaged?
- Is the thermostat set on position ●?

2. The temperature inside the compartments is not cold enough

- Do the doors close properly?
- Is the appliance installed near a heat source?
- Is the thermostat correctly set?
- Is air circulation inhibited?

3. The refrigerator compartment temperature is too cold

- Is the thermostat correctly set?

4. Water collects in the bottom of the refrigerator compartment

- Is the defrost water run-off clogged?

5. The internal light does not work

Refer to point 1 and then:

- Unplug the appliance from the mains.
- Follow the instructions and drawing in the enclosed table to gain access to the bulb.
- Check the bulb and, if necessary, replace. Do not use a bulb which exceeds 15 W.

Note:

- **The edge of the refrigerator door may be hot. This is not a fault but is intended to prevent the formation of condensation.**
- **Gurgling noises etc. inside the refrigerating circuit are quite normal.**

AFTER SALES SERVICE

Before contacting our after sales service:

1. Try to remedy the problem (see "Troubleshooting guide").
2. Restart the appliance to see if the fault repeats.
   If the malfunction persists, switch off the appliance and switch on again after an hour.
3. If the malfunction still persists, contact our Customer Service, specifying:

- the nature of the problem
- the appliance model
- The Service number (the number after the word SERVICE on the rating plate located on the side of the fruit and vegetable drawer).
- Your full address
- Your telephone number complete with area code.

SERVICE 0000 000 00000

Note: Door opening direction changes effected by our Customer Service are not covered by the terms of guarantee.

INSTALLATION

- Do not install the appliance in the vicinity of a heat source.
- Install the appliance in a dry and well ventilated room.
- Make sure there is sufficient clearance above and below the refrigerator to ensure free air circulation.
- Clean the appliance interior (see "How to clean the refrigerator compartment").
- Mount the accessories.

ELECTRICAL CONNECTION

- **Electrical connections must be made in accordance with local regulations.**
- Voltage and power consumption information is shown on the rating plate on the side of the fruit and vegetable drawer.
- **The appliance must be earthed as prescribed by law. The manufacturer declines all liability for injury to persons and animals or damage to property resulting from failure to comply with this requirement.**
- If the appliance plug and wall socket are incompatible, the socket must be replaced by a qualified electrician.
- Do not use extension leads or multiple adapters etc.

FREE-STANDING APPLIANCES (only)

- Mount the spacers (if provided) on the back of the condenser behind the appliance (see figure).
- For best performance, leave a clearance of at least 5 cm above the appliance and enough space between the appliance and the adjacent furniture to allow air to circulate.
- Make sure the appliance is perfectly level and if necessary, adjust the front feet.

ELECTRICAL DISCONNECTION

- Disconnect the appliance from the mains by removing the plug or disconnecting the two-pole circuit breaker upstream of the socket.

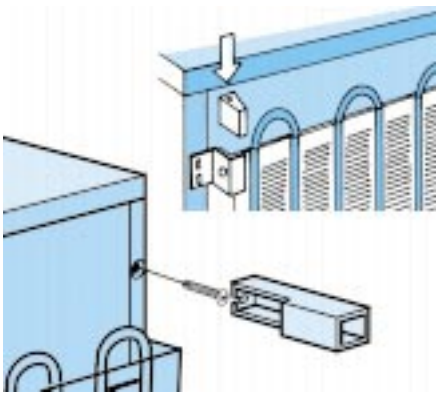

CONTENTS GB

BEFORE USING THE REFRIGERATOR PAGE 4

SAFEGUARDING THE ENVIRONMENT PAGE 4

PRECAUTIONS AND GENERAL RECOMMENDATIONS PAGE 5

HOW TO OPERATE THE REFRIGERATOR COMPARTMENT PAGE 6

HOW TO OPERATE THE FREEZER COMPARTMENT PAGE 7

HOW TO DEFROST AND CLEAN THE FREEZER COMPARTMENT PAGE 8

HOW TO CLEAN THE REFRIGERATOR COMPARTMENT PAGE 8

CARE AND MAINTENANCE PAGE 9

TROUBLESHOOTING GUIDE PAGE 9

AFTER-SALES SERVICE PAGE 10

INSTALLATION PAGE 10

ELECTRICAL CONNECTION PAGE 11

BEFORE USING THE REFRIGERATOR

Your new appliance is exclusively for domestic use.

The **freezer compartment** ******** can be used for freezing fresh and cooked food, making ice cubes, and storing frozen and deep-frozen food**; defrosting is a manual procedure**.

The refrigerator compartment, which has an **automatic defrost feature**, is used for the storage of fresh food and beverages.

To get the most out of your new appliance, read the user handbook thoroughly. The handbook contains a description of the appliance and useful tips for storing food.

Keep this handbook for future consultation.

1. After unpacking the appliance, make sure that the door shuts properly.
   Any damage must be reported to your dealer within 24 hours after delivery of the appliance.
2. **Wait at least two hours without moving the appliance before switching on. This will give the refrigerant circuit time to settle and operate efficiently.**
3. Installation of the appliance and electrical connections must be carried out by a qualified electrician, in accordance with the manufacturer's instructions and local regulations.

SAFEGUARDING THE ENVIRONMENT

1. Packing

The packaging material is entirely recyclable, and marked with the recycling symbol.
Follow local regulations for scrapping.

Keep the packaging materials (plastic bags, polystyrene parts, etc.) out of reach of children, as they are potentially dangerous.

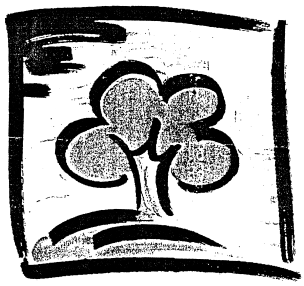

2. Appliance

The appliance is made using recyclable materials. Dispose of the appliance in conformity with local environmental regulations.

Make the appliance unusable by cutting off the power cord. The appliance must be delivered to an authorised collection centre for the recovery of refrigerant gas.

Information:

This appliance does not contain CFCs (replaced with R134a) or HFCs (replaced with R600a - Isobutane). For more information, refer to the identification data plate affixed to the appliance.

PRECAUTIONS AND GENERAL RECOMMENDATIONS

- Use the **refrigerator compartment** only for storing fresh food and beverages and use the **freezer compartment** only for storing frozen food, freezing fresh food and making ice cubes.
- Do not cover or obstruct the air vents of the appliance.
- Do not store liquids in glass containers in the freezer compartment - danger of bursting.
- Do not eat ice cubes or ice lollies immediately after taking them out of the freezer compartment - risk of “cold” burns.
- Do not allow children to play or hide inside the appliance - risk of becoming trapped and suffocating.
- **Before servicing or cleaning the appliance, unplug it from the mains or disconnect the electrical power supply.**
- The power cable may only be replaced by an authorised person.

Declaration of conformity

- This appliance is intended to come into contact with foodstuffs and conforms to D.L. 108 of 25.01.1992 (European Directive 89/109/EEC).

Appliances with Isobutane (R600a)

Isobutane is a natural gas having low environmental impact. Caution is required, however, since isobutane is flammable. Therefore, it is essential to ensure that refrigerant pipelines are not damaged.

HOW TO OPERATE THE REFRIGERATOR COMPARTMENT

This appliance is a refrigerator with a ******* star freezer compartment.

Defrosting of the refrigerator compartment is completely automatic.

The refrigerator can operate at ambient temperature between +10°C and +38°C. Optimal performance is obtained at temperatures between +16°C and +32°C.

Switching on the refrigerator for the first time

Insert the plug into the mains socket.

The thermostat is used to adjust the temperature of both compartments: refrigerator and freezer.

How to adjust the temperature of the compartments:

1. For correct operation and optimum storage of food, **follow instructions given in the enclosed product sheet for thermostat adjustment.**
2. To adjust the temperature in the refrigerator compartment, turn the thermostat control knob:
   - **lowest** numbers **1-2/MIN** for the **LEAST COLD** internal temperatures;
   - **highest** numbers **5-7/MAX** for the **COLDEST** internal temperatures.

Thermostat set to ●: no operation, no light.

Note:

The ambient air temperature, frequency of door opening and the position of the appliance can affect internal temperatures. These factors must be taken into account when setting the thermostat.

How to use the refrigerator compartment

Position the food as illustrated in the figure.

A Cooked food
B Fish, meat
C Fruit and vegetables
D Bottles
E Eggs
F Butter, cheese and dairy products

Notes:

- The space between the shelves and the rear wall of the refrigerator compartment must be unobstructed to allow circulation of air.
- Do not place food in direct contact with the rear wall of the refrigerator compartment.
- Do not place hot food in the refrigerator or freezer.
- Store liquids in closed containers.
- Storing vegetables with a high water content can result in condensation in the crisper drawer: this will not affect the correct operation of the appliance.

HOW TO OPERATE THE FREEZER COMPARTMENT

The freezer is a ✻* star compartment.**

This compartment can be used to store frozen foods for the period of time indicated on packaging. The freezer can also be used to freeze fresh food by positioning it on the rack; place frozen food in the lower part of the compartment so that there is no contact with fresh food that has yet to be frozen.

The quantity of fresh food that can be frozen in 24 hours is shown on the rating plate.

Important:

Before freezing, wrap and seal fresh food in:

- aluminium foil, cling film, air and water-tight plastic bags, polythene containers with lids or freezer containers suitable for freezing fresh food.
- In the event of a power cut, the freezer compartment will maintain a sufficiently low temperature for food storage. However, it is advisable to avoid opening the compartment door during such periods.

Important:

The table alongside shows the recommended maximum storage time for frozen fresh foods.

When purchasing frozen food products:

- Ensure that the packaging is not damaged (frozen food in damaged packaging may have deteriorated). If the package is swollen or has damp patches, it may not have been stored under optimal conditions and defrosting may have already begun.
- When shopping, leave frozen food purchases until last and transport the products in a thermally insulated cool bag.
- Place the items in the freezer compartment as soon as you get home.
- If food has defrosted even partially, do not re-freeze it. Consume within 24 hours.
- Avoid, or reduce temperature variations to the minimum. Respect the best-before date on the package.
- Always observe the storage information on the package.

Making ice cubes

- Fill the ice cube tray 3/4 with water and place it at the bottom of the freezer compartment. Do not use sharp or pointed instruments to detach the tray if it is stuck to the compartment bottom.

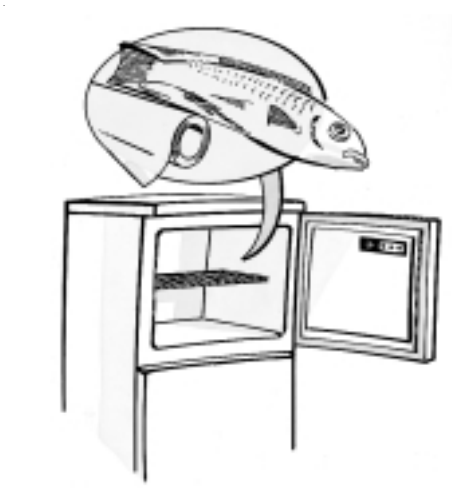

MONTHS	FOOD
1-3	
4-7	
8-12	

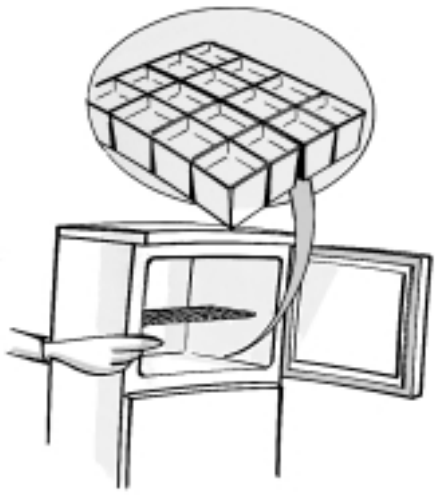

HOW TO DEFROST AND CLEAN THE FREEZER COMPARTMENT

Defrost the freezer compartment once or twice a year, or when the ice on the walls reaches a thickness of about 3 mm. If possible, carry out defrosting when the compartment is nearly empty.

- Remove the food from the low temperature compartment, wrap in a newspaper and group together in a cool place or in a portable cooler.
- **Disconnect the appliance from the mains power supply.**
- Leave the door open to allow the frost to melt.
- Remove the defrost water from the compartment bottom.
- Clean the interior with a sponge dampened in lukewarm water and neutral detergent. **Do not use abrasive products**.
- Rinse the interior and dry thoroughly.

Note: Do not use sharp or pointed metal instruments to scrape off ice; do not heat the freezer compartment artificially.

HOW TO CLEAN THE REFRIGERATOR COMPARTMENT

Periodically clean the inside of the refrigerator compartment.

Defrosting of the refrigerator compartment is completely automatic.

Droplets of water on the rear wall of the refrigerator compartment indicate that the periodic automatic defrost cycle is in progress. The defrost water is automatically routed to a drain outlet and into a container from which it evaporates.

Clean the defrost water drain outlet regularly using the tool supplied with the appliance in order to ensure defrost water is removed correctly.

Before carrying out any cleaning operations, unplug the appliance.

- Use a sponge dampened in lukewarm water and/or neutral detergent.
- Rinse the interior and dry with a soft cloth. **Do not use abrasive products**.

CARE AND MAINTENANCE

For built-in appliances

- Periodically clean air vents with a vacuum cleaner or a brush (see **figure A**).
- Clean the outside using a soft cloth.

Freestanding appliances

- Periodically clean the condenser at the rear of the appliance with a vacuum cleaner or a brush (see **figure B**).

Prolonged disuse

1. Empty the refrigerator and freezer compartments.
2. Disconnect the appliance from the mains power supply.
3. Defrost the freezer compartment, and clean and dry both compartments.
4. Leave the doors open to prevent formation of unpleasant odours.

A

B

TROUBLESHOOTING GUIDE

1. **The appliance is not working.**
   - Is there a power failure?
   - Is the plug properly inserted in the mains socket?
   - Is the double-pole switch on?
   - Has the fuse blown?
   - Is the power cord in perfect condition?
   - Is the thermostat set to ● (Stop)?
2. **Temperature inside the compartments is not low enough.**
   - Is the door shut properly?
   - Is the appliance installed near a heat source?
   - Is the thermostat setting correct?
   - Are the air circulation grilles blocked?
3. **Temperature inside the refrigerator compartment is too low.**
   - Is the thermostat setting correct?
4. **Water collects at the bottom of the refrigerator compartment.**
   - Is the defrost water drain blocked?
5. **The inside light is not working.**
   Perform the checks for problem 1, then:
   - Disconnect the appliance from the mains power supply. To inspect the bulb, refer to the instructions and illustration on the attached table.
   - Check the bulb and, if necessary, replace it with one of the same type.
     Replace using maximum 15W bulb.
6. **Excessive frost build-up in the freezer compartment.**
   - Is the door shut properly?
   - Is food obstructing proper door closure?

Notes:

- **The front edge of the appliance may be hot. This prevents the formation of condensation and is not a defect.**
- **Gurgling and hissing noises due to expansion in the refrigerant circuit are normal.**

AFTER-SALES SERVICE

Before contacting After-Sales Service:

1. See if you can solve the problem yourself with the help of the "Troubleshooting guide".
2. Switch the appliance on again to see if the problem has been solved.
   If it has not, disconnect the appliance from the power supply and wait for about an hour before switching on again.
3. If the problem persists after this course of action, contact After-sales Service.
   Specify:
   - the nature of the problem
   - the model
   - the Service number (the number after the word SERVICE on the data plate on the inside of the appliance)
   - your full address
   - your telephone number and area code

SERVICE 0000 000 00000

Note:

The direction of door opening can be changed. If this operation is performed by After-sales Service it is not covered by the warranty.

INSTALLATION

- Install the appliance away from heat sources.
- Install the appliance in a dry, well-ventilated place.
- Do not obstruct the top and bottom vent zones.
- Clean the inside (see "How to clean the refrigerator compartment").
- Fit the accessories supplied.

Electrical connection

- **Electrical connections must be made in accordance with local regulations.**
- Voltage and power consumption are indicated on the rating plate (at the side of the crispers).

Freestanding appliances

(not built-in)

- Fit the spacers (if supplied) on the rear of the condenser positioned at the back of the appliance (see figure).
- To optimize appliance efficiency, leave a 5 cm gap above the appliance and make sure that adjacent kitchen units are sufficiently distanced to allow air circulation.
- Ensure that the appliance is level, using the front adjustment feet if necessary.

- **Regulations require that the appliance is earthed.**
  The manufacturer declines all liability for injury to persons or animals and for damage to property resulting from failure to observe the above procedures and reminders.
- If the plug and socket are not of the same type, have the socket replaced by a qualified electrician.
- Do not use extension leads or adaptors.

Disconnecting the appliance

It must be possible to disconnect the appliance by unplugging it or by means of a two-pole switch fitted upline of the socket.

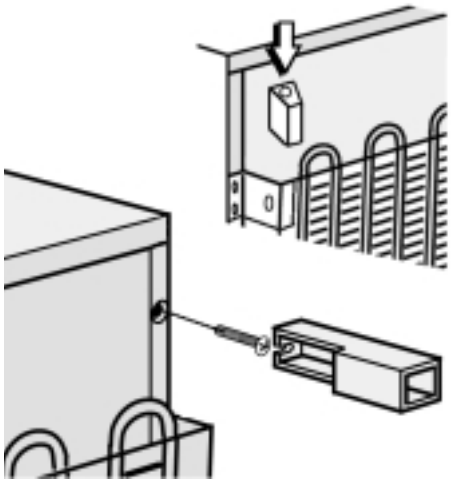

ELECTRICAL CONNECTION

For Great Britain only

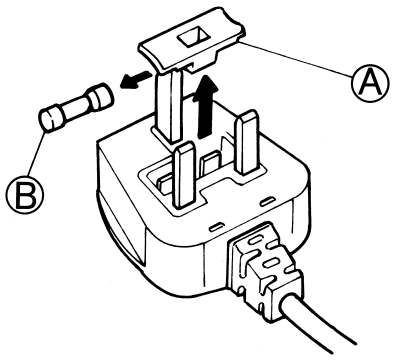

Warning - this appliance must be earthed

Fuse replacement

If the mains lead of this appliance is fitted with a BS 1363A 13amp fused plug, to change a fuse in this type of plug use an A.S.T.A. approved fuse to BS 1362 type and proceed as follows:

1. Remove the fuse cover (A) and fuse (B).
2. Fit replacement 13A fuse into fuse cover.
3. Refit both into plug.

Important:

The fuse cover must be refitted when changing a fuse and if the fuse cover is lost the plug must not be used until a correct replacement is fitted.

Correct replacement are identified by the colour insert or the colour embossed in words on the base of the plug.

Replacement fuse covers are available from your local electrical store.

Connection to a rewirable plug

If the fitted plug is not suitable for your socket outlet, then it should be cut off and disposed of in order to avoid a possible shock hazard should it be inserted into a 13A socket elsewhere.

A suitable alternative plug should then be fitted to the cable.

The wires in the mains lead are coloured in accordance with the following code:

BLUE - “NEUTRAL” (“N”)

BROWN - “LIVE” (“L”)

GREEN AND YELLOW - “EARTH” (“E”)

1. The GREEN AND YELLOW wire must be connected to the terminal in the plug which is marked with the letter “E” or by the Earth symbol ⏚ or coloured green or green and yellow.
2. The BLUE wire must be connected to the terminal which is marked with the letter “N” or coloured black.
3. The BROWN wire must be connected to the terminal which is marked with the letter “L” or coloured red.

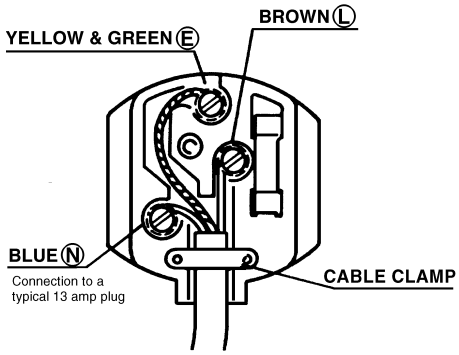

For the Republic of Ireland only

- The information given in respect of Great Britain will frequently apply, but a third type of plug and socket is also used, the 2-pin, side earth type. In this case, the wire which is coloured GREEN AND YELLOW must be connected to the EARTH contact, and the two wires to the two pins, irrespective of colour. The supply to the socket must be fitted with a 16 amp fuse.

6gb33006.fm5 Page 1 Wednesday, February 14, 2001 4:36 PM

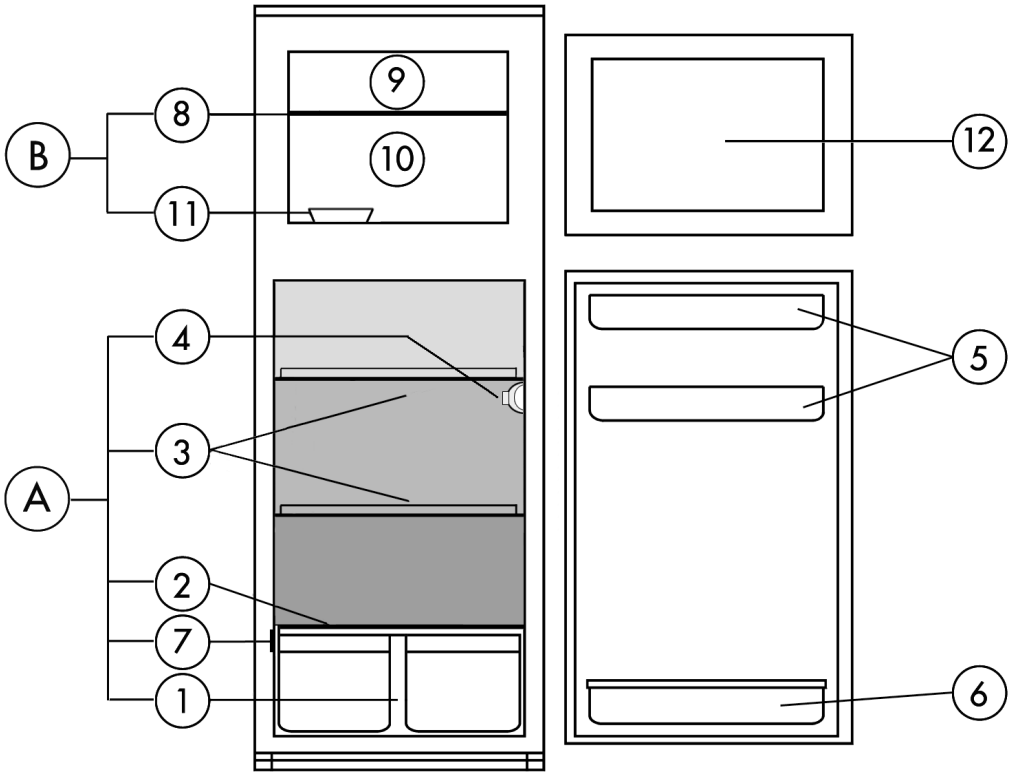

A. Refrigerator compartment

1. Crisper drawer
2. Crisper shelf
3. Shelves / Shelf area
4. Thermostat control knob/light
5. Door trays
6. Bottle rack
7. Rating plate (at the side of crisper drawer)

B. Freezer compartment ****

8. Grid
9. Area for freezing
10. Area for storing frozen foods
11. Ice cube tray
12. Freezer compartment inner door

Least cold zone
Intermediate temperature zone
Coldest zone

Notes: The number of shelves and type of accessories may vary, depending on the model.
All shelves, door trays and racks are removable.

Important: Refrigerator accessories must not be washed in a dishwasher.

Refrigerator compartment controls

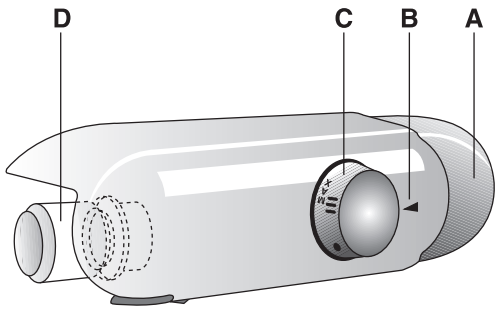

A.Light switch cam

B.Thermostat control reference

C.Thermostat knob

D.Light bulb (max 15 W)

Thermostat set to	**1/MIN**:	**minimum** refrigeration.
Thermostat set to	**2-3/MED**:	**medium** refrigeration.
Thermostat set to	**7/MAX**:	**maximum** refrigeration.
Thermostat on	●:	no refrigeration, **no light.**

Recommended thermostat setting: 2-3/MED position.

Note: The ambient air temperature, the frequency of door opening and the position of the appliance can affect the internal temperatures of the refrigerator. These factors must be taken into account when setting the thermostat.

Removing the light bulb

Unscrew the bulb anticlockwise as shown in the figure.

Printed in Italy 02/01